

Before attempting either operation ensure the water is turned off.

Resetting the Water Block.

There are two types of set up for the Water Block.

1: The reset device is attached to the Water Block. In which case you press the red lever.



2. The device does not have the reset attached in which case you have to undo the reducer on the bottom of the water block and press in the red pin indicated.



Resetting the float system.

Remove the top of the cooler. Press the button indicated.

